


# Meramac 3 Room Tent Instruction Sheet

**Pitching your tent for the first time: we recommend that you practice pitching your tent before you actually leave for your first trip.**

1. Choose a suitable pitching site by removing all sharp objects which may damage the floor. Spread out the tent on the ground, making sure the door zippers are closed but the window zippers are at least partially open which lets air into the tent as you're setting it up.
2. Assemble the 7 pole sets, making sure all the pole sections slide completely together. The two longest poles are the main room tent poles. The next longest poles with metal ferrules on the ends are for the side rooms. The short pole with plastic end caps is the fly pole. The other two shortest poles are for the brow poles over the side doors.
3. Lay the 2 main assembled tent pole sets next to the tent. Start by threading these poles through the tent pole sleeves one at a time.

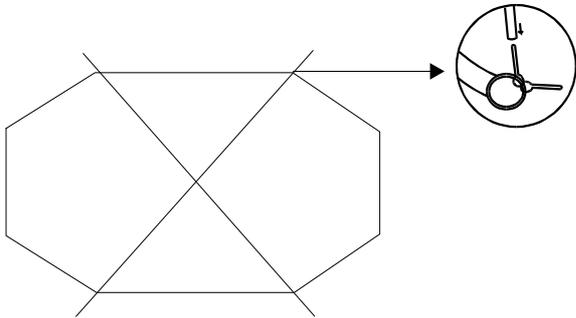


4. Insert the pins located at the tent floor into the ferrules at the ends of the fiberglass poles. You'll notice that there are two pins attached to the O-rings at the base of the tent, one pin is for the main tent pole and the other will be used for the side room pole. Go to the other end of the first pole and flex the pole into an arch and place that end of the pole into the pin at that corner. Repeat this process with the other main tent pole. This process may be easier with two people. Finish by attaching the tent clips around the poles.
5. To assemble the side rooms, locate the longer remaining poles. Insert one of the poles through the pole sleeve on one of the side rooms. Gently flex the fiberglass pole and insert the remaining pins located at

base of the tent into the ferrules at the ends of the fiberglass pole. Repeat the same procedure for the remaining side room. Stake down the tent by inserting stakes through the webbing located at the base of tent and bottoms of both side rooms. The erected tent should appear as shown below.



6. Place the fly ridge pole into the pole pockets that are located in the middle of the fly on the bottom side. Place the brow poles into the eyelets on the side of inner tent. Place the fly over the tent with the awning over the front door. Inset the brow poles that are over the side doors into the grommets on the webbing of the tent clips. Attach the buckle from each corner of the flysheet to the buckle at each tent corner. The webbing from the flysheet to the buckle can be adjusted to properly tension the flysheet. The tent with the fly properly attached is shown below.

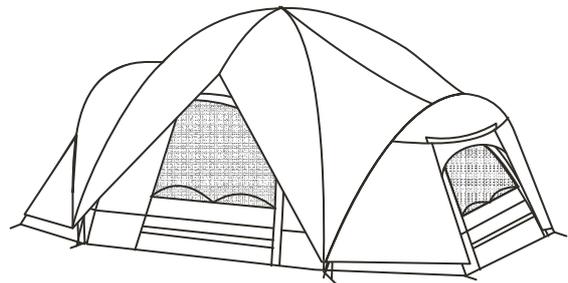

7. If the conditions are windy, or if you anticipate that it may become windy, it is advisable to attach the guy lines. The most important guy lines are the ones on the side of the tent where the wind is blowing. Proper guying on the side of the wind will keep the tent from shifting around.
8. Divider curtains are included to divide your tent into 3 separate rooms for privacy.