

FOXPRO[®]

High Performance Game Calls



HELLFIRE

Instruction Manual

FOXPRO Inc. • 14 Fox Hollow Drive • Lewistown, PA 17044 • (717)-248-2507

www.gofoxpro.com

Important Information

FOXPRO®'s goal is to provide our customers with the highest quality products in the industry. We take great pride in manufacturing our products in the USA. Please do not hesitate to contact us for assistance, comments or questions.

FOXPRO® Inc.

14 Fox Hollow Drive
Lewistown, PA 17044
(717) 248-2507
Fax: (717) 247-3594

Hours of Operation

Monday – Friday
8AM – 5PM EST

Contact Us

Customer Service: (717) 248-2507
Toll Free Orders Only: 866-463-6977
General Inquiry E-mail: sales@gofoxpro.com

Stay up to date with the latest sounds by visiting our online sound library. Watch for new products and upgrades from FOXPRO®. Visit us online:

www.gofoxpro.com



This manual, the animal sounds stored in your caller, and animal sounds purchased from FOXPRO® Inc. for installation in your caller is protected by copyright.

Publication Date: November 7, 2014
Copyright ©© 2014 by FOXPRO® Inc.
REV4


Table of Contents

1.	Getting Started.....	5
	1-1 What's in the Box?	5
	1-2 Hellfire: First Glance.....	5
	1-3 Hellfire Requirements	6
	1-4 TX9 First Glance.....	6
	1-5 TX9 Requirements.....	8
2.	Quick Start Guide	8
	2-1 Playing Sounds with the TX9 Remote	8
	2-2 Using Presets (P1 and P2)	9
3.	Batteries and Charging.....	10
4.	Auxiliary jack Function	11
5.	Using an Additional Speaker	11
	5-1 Connecting an External Speaker	11
6.	TX9 Detailed Information.....	12
	6-1 Recall Button	12
	6-2 Elapsed Timer.....	12
	6-3 FOXBANG	12
	6-4 Reverse Text Mode	13
	6-5 Large Text Mode	13
7.	Programming the Hellfire.....	14
	7-1 Getting New Sounds	14
	7-2 Programming the Hellfire (Windows PC's)	14
	7-3 Transferring a New Playlist to the TX9.....	16
8.	Product Care & Maintenance.....	16
9.	Troubleshooting.....	18

10. Maximizing Remote Range	18
11. FCC & IC Information.....	19
12. Warranty Statement	20

1. Getting Started

 Congratulations on the purchase of the FOXPRO Hellfire digital wildlife caller! The Hellfire is easy to use, reliable, and packed with great features. Please take the time to read and understand the information in this instruction booklet. This will ensure that you receive the maximum benefit from the FOXPRO Hellfire.



WARNING: To avoid personal injury and product damage, read all operating instructions and safety precautions in this guide before using the FOXPRO Hellfire digital game call system. A digital copy of this file can be downloaded from:
http://www.gofoxpro.com/resources/manuals/MANUAL_FOXPRO_HELLFIRE.pdf


1-1 What's in the Box?

Included in the box, you should find the following list of items:

- 1) Hellfire digital game call
- 2) TX9 remote control
- 3) Operators manual
- 4) Warranty Registration
- 5) 3.5mm stereo patch cable

1-2 Hellfire: First Glance

The following graphic depicts the Hellfire. Certain aspects of the Hellfire are marked with a number, which corresponds to the chart defining that particular element.

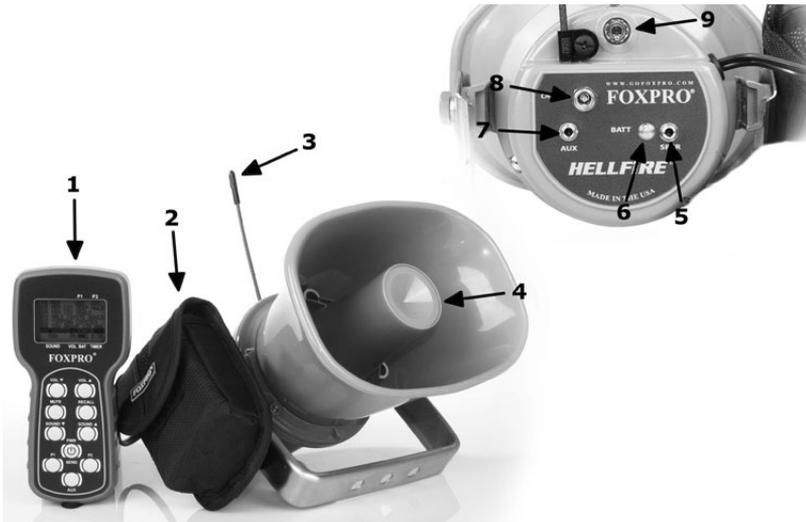

Number	Description
1	Hellfire Remote (TX9)
2	Battery pouch
3	Antenna
4	Horn speaker
5	External speaker jack
6	Pilot lamp / low battery indicator
7	Auxiliary device jack
8	Charge jack
9	Power on/off switch

1-3 Hellfire Requirements

The Hellfire is shipped without batteries. The Hellfire requires 10 ‘AA’ batteries. You may use alkaline batteries to get started, but it is recommended that you use high capacity NiMH (Nickel Metal Hydride) batteries or one of FOXPRO’s optional rechargeable battery packs. Visit the FOXPRO website to view the entire line of charging options for the Hellfire.

Installing Batteries in the Hellfire

1. Open the Velcro seal on the battery pouch.
2. Remove the plastic battery holder from the pouch. This tray is double-sided providing spaces for 5 ‘AA’ batteries on each side. The tray is connected to a power cable that runs into the Hellfire. You may unplug this cable and disconnect the tray from the Hellfire during installation. Be sure to reconnect the cable after battery installation is complete.
3. Place the batteries into each cavity while observing polarity as indicated.
4. Place the battery tray back into the pouch and close it with the Velcro seal.

1-4 TX9 First Glance

The following image depicts the Hellfire remote (TX9). Certain elements of the remote are marked with a number that corresponds to a chart defining that particular element.



Number	Description
1	Volume down
2	Mute
3	Sound down
4	Preset 1
5	Auxiliary
6	Lanyard loop
7	Preset 2
8	Power/Send
9	Sound up
10	Recall
11	Volume up

1-5 TX9 Requirements

The Hellfire remote control operates on a single 9V battery. It is recommended that you use a high quality alkaline battery.

Installing the Battery in the Hellfire Remote:

1. Access the battery compartment by removing the door from the back of the remote. The door slides down and off the remote.
2. Attach the 9V battery to the power wire in the back of the remote.
3. Slide the battery compartment door back on to the remote.

2. Quick Start Guide

We realize that some of you may wish to jump directly into basic operations, such as playing sounds and using presets, before digesting the manual in its entirety. This is a very brief overview to get started. It is strongly recommended that you read the manual completely to fully understand all of the capabilities of the system.

2-1 Playing Sounds with the TX9 Remote

Prior to attempting to use the Hellfire with the remote, make sure that the Hellfire is turned on. To turn on the Hellfire, simply move the toggle switch (located on the back of the speaker cap) to the “on” position (switch up).



IMPORTANT NOTE


The Hellfire remote control is not intended to operate the caller at distances shorter than 1 meter (3 feet). If the remote is located too close to the caller, proper operation cannot be ensured.

1. Turn on the TX9 remote by pushing and holding the power/send button for 2-3 seconds. You will see the LCD panel light up and display the sound list.
2. Use the sound up or down arrow button to cycle through the sound list. Observe the black horizontal selector bar moving up or down in conjunction with your button presses. When scrolling through the sounds, the visible playlist will change by the page. The first page will display sounds 000 – 005, page two displays 006 – 011, etc.
3. After highlighting a sound you wish to play, press the power/send button a single time. This action transmits a radio signal to the Hellfire telling it to begin playback of the selected sound. Note that the sound number you selected is displayed on the TX9 in the bottom left side of the screen. The Hellfire provides no visual feedback that the sound has been received.
4. Raise the volume level by pressing the volume up button. To rapidly ramp up the volume, press and hold volume up. There are a total of 20 volume steps to choose from.

5. If you wish to pause or mute the sound, simply push the mute button a single time. To make the sound play again, push the mute button one more time.
6. To switch sounds, follow steps 2 and 3.
7. To turn off the TX9, press and hold the power/send button for 4-5 seconds. A message will appear displaying, "Release key to turn off transmitter". As soon as you see this message, release the button.

2-2 Using Presets (P1 and P2)

The TX9 features two presets. Each preset provides you with one button access to your most frequently used sound. The stored number of each preset is shown in the upper right corner of the top status line (see image below).

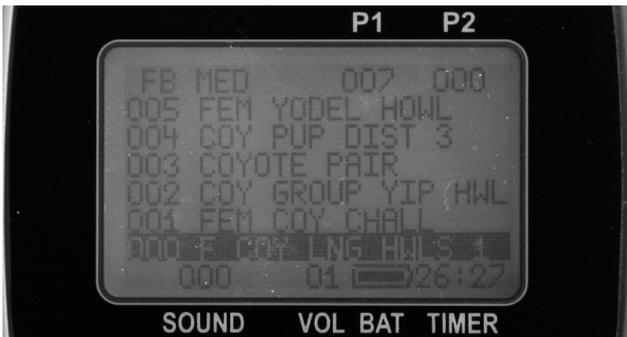

The TX9 will display 000 for both P1 and P2 when you first turn it on. In order to use the preset buttons, you must first assign a sound and volume to each.

To assign a preset, perform the following:

1. Press and hold the P1 or P2 button for 5 seconds. Notice the top status line of the TX9 display will change to: "SEL SND/VOL PRESS P1" or "SEL SND/VOL PRESS P2".
2. Use the sound selector buttons to highlight the sound you wish to have set as the particular preset.
3. Use the volume buttons to set the desired volume level for the preset.
4. Push the P1 or P2 button a final time, depending upon which one you are setting up.

To initiate playback of a preset, push the P1 or P2 button while the Hellfire is turned on. The Hellfire will immediately switch to that sound and volume level.

3. Batteries and Charging

The Hellfire operates on 10 'AA' batteries. For optimal performance, FOXPRO recommends the use of high-capacity 2000 mAh or greater NiMH (Nickel Metal Hydride) rechargeable batteries rather than alkaline types. You can find compatible charging systems available from FOXPRO on the FOXPRO website at: <http://www.gofoxpro.com>

When you ask the Hellfire to play at extremely loud volume levels, the current demand on the batteries is much more than alkaline cells can deliver. Consequently, the run time of these batteries can be very short. The Zinc Carbon (so-called "Heavy Duty" cells) are expressly not recommended. The performance of the Hellfire will be much better with high-capacity NiMH batteries.

On the back of the Hellfire, you will notice the amber LED. This is the pilot lamp, but also serves as the low battery indicator. When this light begins to blink during operation, it is alerting you that the batteries need recharged (if using rechargeable batteries) or replaced (if using alkaline batteries). If the batteries drop too low to power the Hellfire, it will shut itself off. Battery run time is going to depend on many factors including how loud you are operating it.



WARNING

Do not mix battery types! For example: never use NiMH rechargeable batteries in conjunction with non-rechargeable alkaline batteries.



WARNING

Never connect your Hellfire to an unregulated 12V system (i.e. automotive systems, high current power supplies, etc.) Serious damage will occur which is not covered by the warranty. The charge jack is intended only for FOXPRO® chargers.

CHARGING RECOMMENDATIONS

- **Never attempt to charge batteries that are not intended to be recharged!** This includes both Zinc Carbon and alkaline cells. The resulting damage can be serious and will not be covered by the warranty.
- **Never attach an unapproved or a non-FOXPRO® charger to your Hellfire!** Damages caused by plugging unapproved charging devices into your Hellfire will not be covered by warranty.
- Remember that NiMH batteries self-discharge about 1% per day.
- Do not leave charging batteries unattended.
- Remove batteries from battery holder when caller will not be used for prolonged periods to help prevent deep discharge.
- Recharge your batteries periodically—even when not in use—to prevent deep discharge.

- Make sure that the rechargeable battery pack is installed in the Hellfire properly.
- Disconnect any/all accessory devices that may be attached to the Hellfire prior to charging. This includes external speakers, auxiliary devices, and USB cables.
- Follow the included instructions for the particular FOXPRO charger that you are using.
- Connect the approved FOXPRO charger to the charger jack on the Hellfire and attach the transformer to the appropriate outlet.
- For maximum charge efficiency, we recommend charging your Hellfire in temperatures ranging from 40°F to 85°F (5°C to 30°C).

4. Auxiliary jack Function

The Hellfire is equipped with an auxiliary jack labeled “AUX”. The purpose of this jack is to allow for the connection of certain external devices, such as the FOXPRO Jack-in-the-Box or Jack-Attack Decoy and to be able to turn these on and off with the TX9 remote control transmitter. However, there are some strict electrical limits involved with this jack. If these limits are exceeded, damage to your Hellfire will result. This damage is not covered by the warranty.

The electrically inclined will want to know that the jack is connected to the drain of an internal Field Effect Transistor with a maximum current rating of 100mA. The “tip” polarity of the 3.5mm jack is positive, while the sleeve is negative. If the external device is connected with the polarity reversed, an internal protection diode within the FET will conduct, causing the device to stay on constantly. The maximum voltage applied to this jack must never exceed 15 volts. Typical uses for this jack would be to control the FOXPRO® Jack-in-the-Box or Jack-Attack Decoy, or to start and stop a video recorder. Instructions on connecting various devices to the “AUX” jack are beyond the scope of this manual. You are urged to seek help from a knowledgeable professional before connecting any unapproved device to this jack. Remember that damage to your Hellfire caused by improper use of the “AUX” jack is not covered by the warranty, nor will FOXPRO® be liable for damage to any device connected to this jack

5. Using an Additional Speaker

The Hellfire is equipped with an external speaker jack. This jack allows you to connect an additional speaker. When you are using an external speaker, be advised that the main speaker will continue to play—there is no way that you can disable to main speaker.

5-1 Connecting an External Speaker

The external speaker jack accepts a standard 3.5mm plug. When choosing an external speaker, make sure that it has an impedance rating of 8-ohms. **NOTE: Be sure that the Hellfire is turned off prior to connecting an external speaker!**

To connect the speaker:

1. Make sure the Hellfire is turned off.
2. Connect the plug from the external speaker into the external speaker jack.
3. Proceed with normal operation.

6. TX9 Detailed Information

The Hellfire features the TX9 remote control. The TX9 features a graphic display, two custom preset buttons, volume level indicator, elapsed tier, and more.



IMPORTANT NOTE

The Hellfire remote control is not intended to operate the caller at distances shorter than 1 meter (3 feet). If the remote is located too close to the caller, proper operation cannot be ensured.

6-1 Recall Button

The recall button remembers the last sound and volume level that you were operating with. For example, if you are playing sound 001 at volume 9, and then switch to sound 002 at volume 5, by pressing the recall button you will jump back to sound 001 and volume 9.


6-2 Elapsed Timer

The elapsed timer allows you to see how long you have been on a stand. The timer starts as soon as you turn on the TX9 transmitter. You can reset the timer by pressing the Auxiliary and Sound Up buttons simultaneously. The timer will automatically reset to 00:00 if it is allowed to continue beyond the 99:59 mark.

6-3 FOXBANG

When enabled, FOXBANG will play your first preset sound upon discharging of your firearm. For example, if you normally switch to a preset of a ki-yi or pup distress after making a shot, FOXBANG can automatically play that preset for you without the need for intervention.

FOXBANG has 5 sensitivity levels which are set via the TX-9 transmitter (lowest, low, medium, high, and highest). FOXBANG status will be shown in the upper left-hand corner of the display

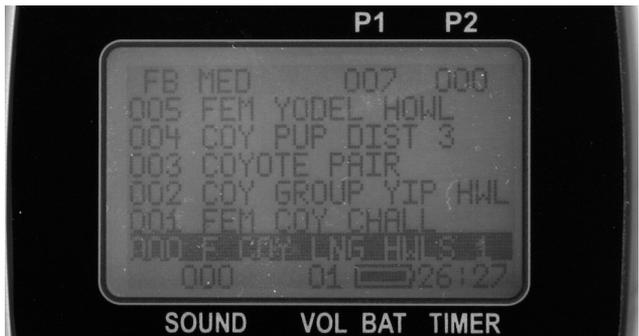

Turning FOXBANG On and Off

1. To turn FOXBANG on, simultaneously press the Sound Up and Down buttons on your TX-9. Repeat this step to turn FOXBANG off.



IMPORTANT NOTE

NOTE: When you activate FOXBANG it will automatically use the previous sensitivity setting. The factory default sensitivity is medium. You may need to adjust this in order to get the right setting for your firearm. If you are using a large caliber (.30-06), you would want to select a lower sensitivity. If using a smaller firearm (such as .17HMR or .22), use the higher sensitivity. Medium settings should be suitable for .17 Fireball, .223, .22-250, etc.

Selecting FOXBANG Sensitivity

1. Press and hold Sound Up and Down on the TX-9 for 3 seconds.
2. Use the Volume Up and Down buttons to select your desired sensitivity.
3. Press the Send button to lock this setting in.



IMPORTANT NOTE

NOTE: An unintended and unavoidable consequence of adjusting the FOXBANG sensitivity to high levels is that handling noises, such as banging of the transmitter case on your firearm stock, may cause unexpected activation of FOXBANG. For this reason, you should choose the lowest sensitivity that affords reliable activation from the muzzle blast. FOXBANG is intended to work when the transmitter is located within about 5 feet of the firearm muzzle.

6-4 Reverse Text Mode

For nighttime operation, there may be times where reversing the screen graphics can be to your advantage. To accomplish this, simultaneously press the P1 and P2 buttons on your TX-9. To switch back to normal, simply repeat the process.

6-5 Large Text Mode

If you have trouble reading the text on the screen, you can engage large text mode on the TX-9. This will display the 3 digit sound ID number along with the 2 digit volume level in large text only (nothing else will be displayed). To engage this, press Volume Up and Volume Down simultaneously. To switch back to normal text mode, reverse this process.

7. Programming the Hellfire

Programming your Hellfire can be done from home with the use of a PC or Mac computer, or by sending the Hellfire to the factory. In order to program the Hellfire from home, you will need the following items:

1. USB A/B printer-style cable
2. Windows based PC running Windows XP, Windows Vista, Windows 7, or Windows 8. If using a Mac, make sure you are running Mac OS 10 or higher.

For detailed programming guides, please visit the FOXPRO website. Mac users can find a very detailed instruction set at the following address:

<http://www.godoxpro.com/site/resources/mac-programming>

All other programming guides can be found at the following address:

<http://www.godoxpro.com/site/resources/programming-support>

The Hellfire features a USB port. The port is located inside of the speaker cap. To gain access to the USB port, you must remove the three screws from the back of the cap. Inside you will see the USB port. As mentioned previously, this will require a USB 2.0 printer-style cable.

7-1 Getting New Sounds

You can access the FOXPRO website at any time to purchase new sounds to program in your Hellfire. The website is located at: <http://www.godoxpro.com>

Once you are at the site, access the “FOXPRO Sounds” option from the main menu and click on one of the sound pack options. You can purchase 4 sounds of your choice, 8 sounds of your choice, and 16 sounds of your choice. Consult the programming link listed at the beginning of this section for more details on purchasing, downloading, and installing new sounds from the website.

The Hellfire is also capable of playing MP3, and uncompressed WAV, files obtained from other sources. The maximum number of sounds that your Hellfire can hold at one time is 200.

7-2 Programming the Hellfire (Windows PC's)

The first step is to download and install the FOXPRO Sound Programming Utility. The installer for the FOXPRO Sound Programming Utility can be downloaded directly from our website at any time by visiting the following web address:

<http://www.godoxpro.com/programmer>

When the page is loaded, locate the "Product Information" box. This box displays current version number, publication date, and MD5 and SHA1 information for validating the installation file as being genuine. The last item in the box contains the official download link. To begin the download, click on the "Download" button.

If you are upgrading from a previous version of the FOXPRO Programming Utility, there is no need to uninstall the original version before launching the new installer as it will automatically upgrade for you. Your original sound library storage folder will remain unchanged.

Depending upon what internet browser you are using, you may be prompted to "Open", "Run", or "Save" the file that is being requested. Some browsers may not prompt you for action and just save the file to your default Download folder. If you are presented the option, we recommend selecting either "Open" or "Run"—in doing this, the installer will automatically launch when the file has been downloaded. Otherwise, you will need to browse your Download folder for the install file which is titled: "foxpro-programming-utility-installer.exe". You will then need to open the file to launch the installer. The installation is very brief and straightforward. When the installation is complete, a message of success will display on the screen.

Launching the Utility

The installer creates a shortcut to launch the programming utility through your programs menu under the Windows start button. The location is: Start Button -> All Programs -> FOXPRO -> FOXPRO Programmer Click on the "FOXPRO Programmer" icon to launch the utility. Upon successful launch, you will be presented with the main interface.

Connecting your Hellfire to the PC

You can now connect the Hellfire to your PC. The USB port is located inside the speaker cap (noted earlier in this chapter). You will need to obtain the appropriate USB cable (USB 2.0 printer-style cable) as one is not included with the product.

After connecting your FOXPRO game call to your PC, the utility should recognize the device as being a valid product and display "Connected to..." followed by the device name. The "Caller Sound Files" column should become active and display the sounds currently installed.

File Locations / Sound Library

If you had the previous version of the utility installed, your default sound library storage point is located at "C:\FOXPRO\Sounds". By clicking on the "Browse Library" button you can browse the sound files stored at that location.

If this is a fresh install with no previous versions, your default sound library storage point is located under your Documents (or My Documents) folder\FOXPRO\Sounds. By clicking on the "Browse Library" button, you can browse the sounds stored at that location.

Your sound library will probably be empty by default. You need to obtain sounds and place them into your library folder in order to install them into your FOXPRO game call.

1. Connect your FOXPRO device to your PC
2. Launch the programming utility
3. If you do not see your new sounds under the "Source Sound Files" column, use the

"Browse Library" button to navigate to the correct location. When the appropriate files are found, double-click on any of the sounds to automatically load all files from that location.

4. Select one, multiple, or all sound files in the "Source Sound Files" column. Click on the position you wish to load the sounds into and click "Insert". Or if you are replacing existing sounds, use "Overwrite".
5. When complete, click on the "Update Caller" button to save your changes. Any sounds being removed will automatically be backed-up.
6. Exit the utility and update your remote control as per the instructions in the next section.

7-3 Transferring a New Playlist to the TX9

Now that you are done programming your Hellfire, you are ready to download the new playlist to the TX9 transmitter. You will need to obtain a 3.5mm male-to-male stereo patch cable for this process.

1. Disconnect all accessories from the Hellfire (i.e. speakers or decoy)
2. Turn the power off on both the Hellfire and the TX9.
3. Connect patch cable from the sound upload jack on the TX9 to the AUX jack on the Hellfire.
4. Turn on the TX9
5. After being powered on, the TX9 display will say "TURN ON CALLER TO BEGIN TRANSFER"
6. Power on the Hellfire.
7. The display on the TX9 will display "TRANSFERRING DATA PLEASE WAIT". When it's done, the display will say "TRANSFER COMPLETE REMOVE CABLE".
8. Unplug the cable from the TX9 first, followed by the main unit. Your sound list will appear on the screen. Cycle through the list to view your changes.



IMPORTANT NOTE

Always unplug the cable from the TX9 before the main unit. If you unplug the main unit end first, this could result in the TX9 needing to be manually reset by momentarily disconnecting the battery.

8. Product Care & Maintenance

In order to help get years of trouble free service with your FOXPRO game call, it is strongly recommended that you read and understand the following points. Many of these are considered proactive or preventative.

Avoid exposure to all precipitation and moisture. Whether you are storing your FOXPRO game call or decoy away for the summer or just having some down time from calling, it is highly recommended that you thoroughly inspect the unit for any signs of moisture. Moisture (perhaps from rain, snow, condensation, or other) can potentially enter the unit or the battery compartment and cause some serious problems. Proper care should be taken to mitigate the introduction of (or potential for introduction of) moisture into the machine and make sure that

no moisture is present during storage. Moisture can quickly lead to corrosion, electrical shorts, and even rust—all of which can possibly render the unit damaged and out of warranty. This type of damage is preventable. For example, if you are operating in rainy, wet conditions, it is recommended that you place the unit inside of a large plastic freezer storage bag or use a water/weatherproof deployment bag to keep water from getting to it. When storing the unit for prolonged periods, be sure that you keep it in a dry location not susceptible to drawing moisture.

Remove batteries prior to storage or extended periods of inactivity! All batteries, whether alkaline or rechargeable, should be removed from the game calls, decoys, and remote controls prior to storage or periods of inactivity. Batteries that are left inside of electronic devices can leak over time as the chemicals start to break down. Damages caused by this can be very severe and potentially destroy the electrical components. To prevent this from happening, simply remove all batteries from all devices before you put them away. Keep in mind; damage caused by battery leakage is not a warranty issue.

Periodically charge your rechargeable batteries when not in use! Rechargeable batteries will not last forever. To help maximize the overall life of your rechargeable batteries, we recommend that you periodically charge them up, perhaps once a month or once every other month, to keep them fresh. Batteries that are left uncharged can enter into a state of deep discharge. Batteries in this state can, at times, no longer accept a charge and result in unexpected operation or complete failure in the field. It is also recommended that you replace rechargeable batteries about once a year just to keep them fresh.

Keep it clean! Our products are designed to be used outdoors and as a result, they can get dirty from time to time. While the dirt may add a bit of character and show that you use it frequently and hard, it is recommended that you spend a few moments after each hunt or at the end of the season prior to storage to clean it up a bit. Total disassembly won't be required, just remove any debris, sticks, leaves, dirt, or anything else that shouldn't be there. If dirt or foreign objects make their way into the machine, it can cause problems down the road.

Store in a dry location! If you are planning on storing the unit away for the summer, it is recommended to keep the unit in a dry location that is not prone to drawing moisture. It is also recommended to remove all batteries prior to removal.

Other storage recommendations include: Do not stack heavy objects on top of your carrying cases or other items that may be holding your caller and/or remote control. If too much pressure is applied to the remote's LCD screen, it can be punctured or damaged. Too much weight bearing down on the caller or remote could result in cracking or fracturing of the plastic housings.

Check it out before heading into the field! If you are getting your caller out for the first time this season, take it out back and check it out before you head out on a hunt. Check your remote range, fidelity, high volume, low volume, battery life, etc. Being prepared and ensuring proper functionality before heading out on a trip can help you decide if you need new batteries, if it needs service, or if everything is working well. This can help prevent cancellation of trips and potential disappointment.

9. Troubleshooting

This section will cover the troubleshooting aspects for the Hellfire and TX9 remote control.

The most common problems are battery related. Before performing anything else, try installing fresh batteries. When your batteries get low, in either the Hellfire or the TX9 remote, unexpected operation can occur. You can experience such things as loss of audio quality, loss of remote control range, and other abnormal results.

Problem	Solution
Hellfire will Not Turn On	Make sure that you have fresh batteries installed. If you are using rechargeable batteries, make sure they are fully charged. Inspect your battery tray and make sure the springs are not compressed or corroded as this could lead to poor battery connectivity.
Hellfire does not produce any sound	Make sure the Hellfire is turned on. If you still cannot play sounds, connect the Hellfire to a computer and inspect the sound files for missing files or signs of corruption.
TX9 remote not controlling Hellfire	See section 10 “Maximizing Remote Range”
Cannot transfer sound list to TX9	This typically stems from an error in the play list on the Hellfire. If you recently added new sounds, double-check the programming for errors such as duplicate or missing sound numbers.
TX9 remote does not turn on	Install a new 9V battery.
Having trouble with programming new sounds	Check out FOXPRO’s website for detailed programming information for your Hellfire. Solutions for many common issues can be found there.

10. Maximizing Remote Range

Remote range can be affected by many factors. Some of these factors can be controlled while others cannot. In order to achieve the best possible remote range with your Hellfire digital game call system, it is recommended that the following points be observed:

- Always use high quality alkaline or lithium cell batteries in the remote.

- Always maintain clear line of sight between the remote control and the Hellfire. Any obstructions—no matter how significant or insignificant—can adversely affect the radio signal.
- Try to keep the remote control approximately six inches away from your body, gun barrel, and metal shooting sticks as these things can detune the remote control.
- Hold the remote control vertically with the antenna pointing skyward.
- Avoid using the device remotely when you are near power lines, cellular phone towers, and radar (such as near airports or military installations).
- Try to elevate the caller off of the ground by approximately three feet. This can greatly maximize your overall remote control range.
- Try to avoid situations where the Hellfire is placed at a lower elevation than the remote control—the caller should always be higher.
- If you are using the Hellfire remotely from a long distance, be sure to allow enough time for device reaction before sending multiple signals. For example, if you request a sound change, consider the amount of time from radio transmission from the remote to the Hellfire until that signal is turned into a change in operation that you are able to perceive. It will not always be instantaneous and may take a second or two before a change in operation is detected from your vantage point. Mashing down button after button can get the device into a state of confusion which could result in undesirable results.

11. FCC & IC Information

FCC Information

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that the interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet or circuit different that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation of this device. Modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment under FCC rules.

Note: Units exported beyond the boundaries of North America are not FCC certified. FOXPRO Inc. makes every attempt at complying with regional regulations governing radio spectrum. However, it is the user's responsibility to ensure compliance with local laws and ordinances that govern the use of radio controlled devices in the area of operation.

Industry Canada Notice

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesirable operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicable aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

12. Warranty Statement

Your FOXPRO® game call is warranted to be free from defects in materials and workmanship that diminish its usefulness for a period of 3 years from the date of purchase if the item was purchased from a FOXPRO Authorized Retailer. Return the unit prepaid and packaged securely along with proof of purchase to the address shown below. Include a note describing the defect or problem. This limited warranty is void if the unit is physically damaged, used in a manner contrary to intended use, or otherwise abused, either intentionally or unintentionally. Also specifically excluded are batteries and damage caused by attempts to charge batteries not intended to be recharged, and water damage.

FOXPRO
14 Fox Hollow Drive
Lewistown, PA 17044

Online Warranty Registration

You can register your Hellfire digital game call online at the following address (locate the Warranty Registration link on the left of this page):

<http://www.gofoxpro.com/warranty>

Make sure that you retain a hard copy of your proof of purchase (i.e. store receipt) for any future warranty claims.