



GMRS PORTABLE TWO-WAY RADIOS

PRODUCT COMPARISON GUIDE

| MODEL | T10 | LXT118 | LXT118VP | T31VP | LXT500VP3 | T51VP3 | LXT560VP3 | †T55VP3 | †LXT535VP3 | T61VP3 | LXT600VP3 | †T65VP3 | T71VP3 | GXT860VP4 | †T75VP3 | T77VP5 | GXT1000VP4 | †GXT1050VP4 |
|-------------------------|------|--------|----------|-------|-----------|--------|-----------|---------|------------|--------|-----------|---------|--------|-----------|---------|--------|------------|-------------|
| Range | 20 | 18 | 18 | 26 | 24 | 28 | 26 | 28 | 24 | 32 | 30 | 32 | 38 | 36 | 38 | 38 | 36 | 36 |
| Channels | 22 | 22 | 22 | 22 | 22 | 22 | 22 | 22 | 22 | 22 | 22 | 22 | 22 | 22 | 22 | 22 | 22 | 22 |
| Extra Channels | | | | | | | 14 | | | 14 | 14 | 14 | 14 | 20 | 14 | 14 | 28 | 28 |
| Privacy Codes | 38 | | | 38 | | 38 | 121 | 38 | | 121 | 121 | 121 | 121 | 142 | 121 | 121 | 142 | 142 |
| Channel Scan | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • |
| Vox | 1 | 1 | 1 | 1 | 1 | 3 | 3 | 3 | 1 | 9 | 3 | 9 | 9 | 5 | 9 | 9 | 9 | 9 |
| Monitor | • | | | • | | • | • | • | | • | • | • | • | • | • | • | • | • |
| Weather Scan | | | | | | | • | | | • | • | • | • | • | • | • | • | • |
| Weather Alert | • | | | • | | • | • | • | | • | • | • | • | • | • | • | • | • |
| Call Alert | 1 | 1 | 1 | 1 | 1 | 1 | 5 | 1 | 1 | 5 | 5 | 5 | 5 | 10 | 5 | 5 | 10 | 10 |
| Animal Call Alert | | | | | | | | | | | | 5 | | | 5 | | | 5 |
| Roger Beep | • | | | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • |
| Auto Squelch | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • |
| Water Resistant | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • |
| Keypad Lock | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • |
| Keystroke Tones | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • |
| SOS Siren | | | | | | | | | | | | | | | | | • | • |
| Headphone Jack | | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • |
| TX Power Levels | 1 | 1 | 1 | 1 | 2 | 1 | 2 | 1 | 2 | 2 | 2 | 2 | 2 | 3 | 2 | 2 | 3 | 3 |
| Silent Operation | • | | | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • |
| Whisper Mode | | | | | | | | | | | | | | | | | • | • |
| Vibrate Alert | | | | | | | | | | | | • | | • | • | | • | • |
| Backlight Display (LCD) | | | | | | | • | | | • | • | • | • | • | • | • | • | • |
| Battery Life Extender | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • |
| Battery Meter | • | | | • | | • | • | • | • | • | • | • | • | • | • | • | • | • |
| Low Battery Indication | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • |
| Micro USB Charge | | | | • | | • | | • | | • | • | • | • | • | • | • | | |
| AC Adapter Charge | | | • | | • | | • | | • | | • | | • | • | • | • | • | • |
| DC Adapter Charge | | | | | | | | | | | | | | | | • | • | • |
| Rechargeable Batteries | | | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • |
| Battery Type | 3AAA | 3AAA | 3AAA | 3AAA | 4AAA | 3AAA | 4AAA | 3AAA | 4AAA | 3AAA | 3AAA | 3AAA | 3AA | 4AA | 3AA | 3AA | 4AA | 4AA |
| Drop-in Charger | | | | • | • | • | • | • | • | • | • | • | • | • | • | • | • | • |
| Charge Time (hours) | | | 12 | 12 | 12 | 12 | 12 | 12 | 12 | 3-4 | 12 | 3-4 | 3-4 | 12 | 3-4 | 3-4 | 12 | 12 |
| USB Cable | | | | • | | • | | • | | • | | • | • | | • | • | | |
| Pair of Headsets | | | | | | | | | | | | | | | | • | • | • |

† Camo Pattern