




LED Cordless Vault Light Care and Usage Instructions

Product #222777 Instruction #1024043 Revision C

Location of Controls


1. ON/DIM/OFF Switch
 2. Light Head Swivel Knob
 3. Battery Compartment*
- *On back of unit.

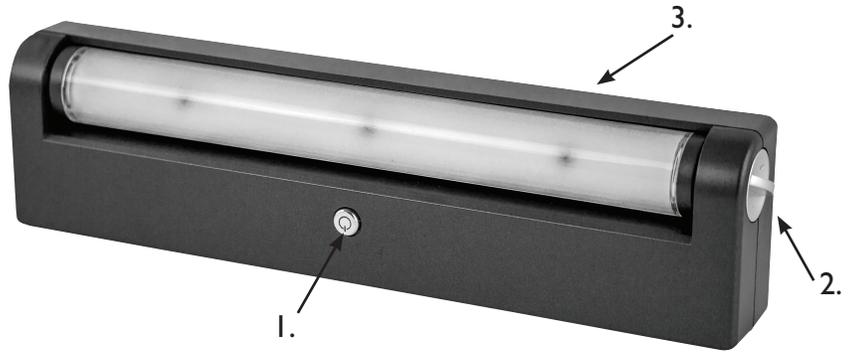

Installation

Note: Hook and loop tape may be cut to desired size for easier removal. Remove the mounting bracket if you are using the hook and loop tape. To do so, hold the light with mounting bracket facing up and the LEDs facing you. Slide the mounting bracket to the left and pull up to remove it.



1. Check the location of where you want to place the under cabinet light.
Make sure it is clean and there is no debris or dust.
2. Two sets of hook and loop tape are included. Place the two pieces of hook and loop tape together so the hook and loop sides adhere to each other.
Repeat this step for the second set of hook and loop tape.
3. Remove the plastic covering on one sticky side of the tape.
Repeat this step for the second set of hook and loop tape.
4. Place one set of the hook and loop tape in the left and right rectangular recessed areas on the base of the under cabinet light.
5. Remove the plastic covering on the other sticky side of the tape.
Repeat this step for the second set of hook and loop tape.
6. Place the under cabinet light in the desired location.
Press firmly for five (5) seconds so the tape adheres to the surface.

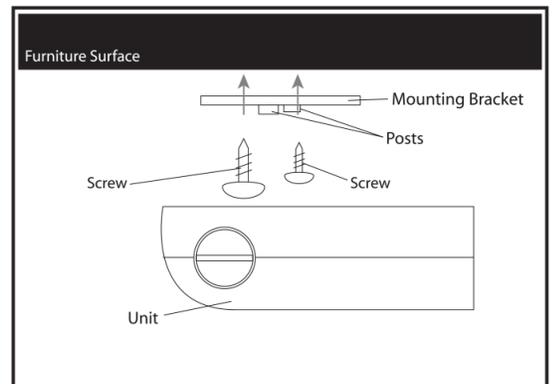

CAUTION: Be cautious of what surface the hook and loop adhesive is attached to, as it may remove paint or damage surface.

Screws and Detachable Bracket (included)

1. Remove both pieces of hook and loop tape by pulling the tape away from the base of the light.
2. Remove the mounting bracket so that it can be used as a template for the screw holes. To do so, hold the light with mounting bracket facing up and the LEDs facing you. Slide the mounting bracket to the left and pull up to remove it.
3. Drill two (2) pilot holes in the location where you want to mount the under cabinet light. Use the detachable bracket as a guide for the pilot holes.
4. Place screws (included) in pre-drilled holes. Do not over tighten.
5. Clip the under cabinet light to the detachable bracket by aligning and inserting the posts on the bracket into the keyhole slot openings on the backside of the under cabinet light. Slide the light to the left to lock it into position.
6. To remove the under cabinet light from the detachable bracket, simply slide the light to the right and pull down.

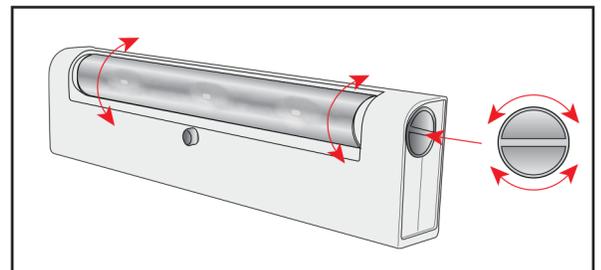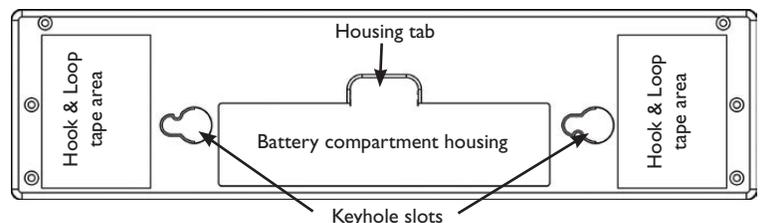

Operating Directions

Light Positioning


Light head rotates by using the Light Head Swivel Knob. Simply turn the knob to direct light where you need it.

NOTE: To prevent damage to the unit, do NOT overturn the light head. Doing so may damage the unit and will void the warranty.

Inserting/Replacing the Batteries


If the LEDs appear to be dim this is an indication that your batteries need to be replaced.

1. Remove the mounting bracket at the back side of the Under Cabinet Light. To do so, hold the light with mounting bracket facing up and the power button facing you. Slide the mounting bracket to the left and pull up to remove it.
2. Pull up on the battery compartment housing tab to open the battery compartment.
3. Remove old batteries, and replace with three new AAA batteries.
4. Make sure to follow battery polarity guide when installing new batteries.
5. Replace battery compartment housing.

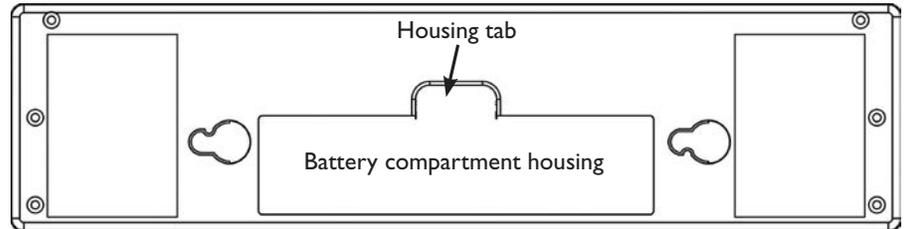

Battery Precautions:

1. Use only the size and type of batteries specified.
2. Always purchase the correct size and grade of battery most suitable for the intended use.
3. Be sure to follow the correct polarity when installing the batteries as indicated in the battery compartment.

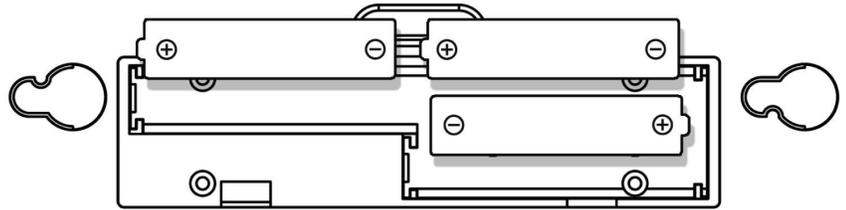

Reversed batteries may cause damage to the device.

4. Do not mix alkaline, standard (Carbon-Zinc), or rechargeable (Nickel Cadmium) batteries.
5. Replace all batteries of a set at the same time. Do not mix old and new batteries.
6. Clean the battery contacts and also those of the device prior to battery installation.
7. Do not dispose of batteries in fire.
8. Remove batteries if consumed or if product is to be left unused for an extended period of time.

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: Modifications to this product not approved by the party responsible for compliance could void the user's authority to operate the product.