

## **HP7 Instructions:**

### **Battery Installation**

- Turn the end cap in a counter-clockwise direction to remove the cap.
- Remove the battery cartridge.
- Place four AAA batteries into the cartridge in the direction indicated on the cartridge.
- Replace the cartridge in the light with the red end going in first.
- Replace the tail cap and turn it clockwise to tighten it until it is fully closed.
- Note – the HP7 in clampack packaging ships with batteries installed.

### **Quick Cycle Switch Operation**

This flashlight is equipped with COAST's Quick Cycle Switch™, featuring high and low beams.

- To activate the high beam from the off position, press the on/off switch until it clicks once, then release. Press the on/off switch until it clicks a second time to turn off the light.
- To activate the low mode, press the on/off switch until it clicks a third time, then release. Press the on/off switch until it clicks a fourth time to turn off the light.
- The light can also be operated in "momentary" mode. Momentary mode is activated by partially depressing the on/off switch (less pressure than required for a full click). The momentary switch will cycle the light through the high and low beam modes.
- Any time the light is turned off for more than five seconds, the high/ low cycle will reset and the high beam will be activated when the light is turned on again.

### **Pure Beam Focusing Optic with Speed Focus**

- This flashlight is equipped with COAST's Pure Beam™ Focusing Optic with Speed Focus™ that allows the user to choose between a broad flood beam and a focused Bulls-Eye Spot™ beam for long distance illumination.
- To adjust the beam into the Bulls-Eye Spot™ mode, slide the head of the light all the way forward.
- To adjust the beam into the broad, flood light mode, slide the head of the flashlight back.