



Before you get started — Recommended GPS Settings

To ensure that these instructions will work for you, please verify that the following options on your GPS are setup correctly

- **Orientation:** North Up
- **Detail Level:** Normal or higher
- **Map Points:** Auto

Instructions (GPSMAP 60 & 76 Series, Rhino, and eTrex units):

1. From the **Main Menu**, select **Setup**
2. Select **Map**. Now you are in the Map Setup Menu. You should be in General settings where you can select **Orientation** and **change it from Track Up to North Up**

Instructions (Garmin Colorado, Dakota, and Oregon Series):


1. From the menu screen, select **Setup**
2. Select **Map**
3. Select **Orientation**
4. Set to **North Up**

Step 1 Remove the battery cover on your GPS Unit **Step 2** Remove the batteries or battery pack



Step 3

Unlock the MicroSD Card slot by carefully sliding it up

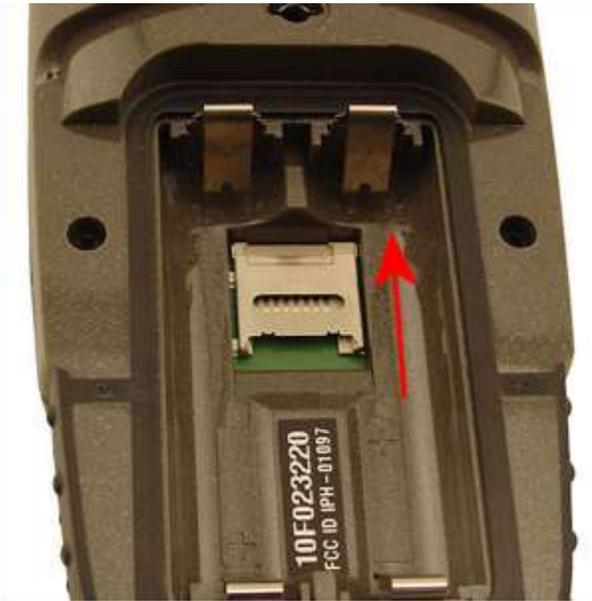

Step 4 The metal card slot cover should now easily lift up



Step 5 Carefully insert your HUNT Map Chip into the slot with the arrow pointing towards the top of the slot and the text on the HUNT Map Chip facing up




Step 6

The HUNT Map Chip should rest on top of the metal contacts inside of the SD Card slot



Step 7

Close the metal cover and slide it down to lock your HUNT Map Chip in place. Then reinstall the batteries/battery pack and battery cover

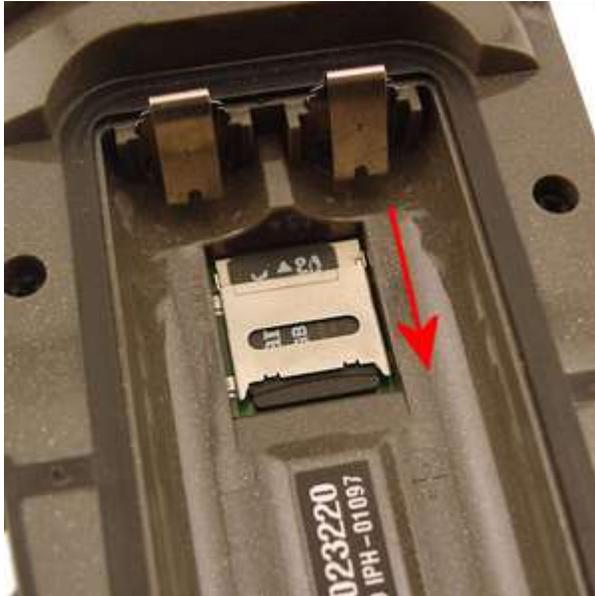

Step 8

To verify that the map has correctly loaded, follow these instructions

- i. On your GPS Unit, go to the **Main Menu**
- ii. Select **Setup > Map**
- iii. Next, select **Map Information**

or

move your cursor over the **circled, lowercase 'i'**. This will tell you what maps are currently loaded to your device and should show your purchased HUNT Map

