

# G2 1500 Electronic Scale

The Hornady® G2 1500 Electronic Scale is a portable and precise scale. It features a large, easy-to-read backlit display, and is quick to setup and calibrate. The precision load cell ensures 1/10 grain accuracy up to 500 grains with a max reference measurement of 1,500 grains.

**WARNING - Before operating the unit, carefully read and understand the instructions.** Contact Hornady Customer Service at 1-800-338-3220 with questions regarding the use of the G2 1500 Electronic Scale.

## A. Tips to Improve Performance

1. Fluctuation in temperature, even a couple of degrees, can cause scale readings to vary. While the scale can be used right away, optimal performance will occur after unit has warmed up for 1 to 3 minutes.
2. Always place the scale on a flat, level, and stable surface when in operation.
3. Electrical interference can cause scale readings to vary. Keep other electronic devices (power strips, motors, radios, phones, etc.) away from scale when in operation.
4. Do not let a fan, AC, heater, or open window blow on scale.
5. Zeroing the scale and powder pan often will produce the most accurate results.

## B. Keypad Button Functions

1. **ON/OFF** Press and hold for two seconds to turn ON or OFF.
2. **ZERO** Press to zero the scale.
3. **UNITS** Press to select measurements in grains (gn), grams (g), ounces (oz) or carat (ct).
4. **CAL** Press to begin calibrating scale. See Calibration, Section C.

## C. Calibration

1. For optimal performance, turn unit on and allow 1 to 3 minutes to warm up.
2. Verify the scale pan is empty.
3. Press **CAL** button for 5 seconds and release. The unit will blink "**CAL**" for a few seconds while it calibrates to an empty pan.
4. After calibrating to an empty pan the display will display "**10.000**." Place the 10g calibration weight onto the scale pan. The unit will blink "**10.000**" for a few seconds while it calibrates to the 10g weight.
5. If the scale has correctly calibrated to the 10g weight, the display will briefly show "**PASS**" before returning to normal operation.
6. If the scale has not calibrated correctly, the display will briefly show "**FAIL**". Please attempt to recalibrate. If the scale will not calibrate after multiple attempts, please contact Hornady Customer Service at 1-800-338-3220.


## D. Auto Off Function

1. With the scale on, you can adjust the Auto Off setting in 30-second increments from 30 to 180 seconds.
2. While holding the **ZERO** button, also press and release the **UNITS** button at the same time. Once the display shows [the new Auto Off setting, release all buttons.  
***NOTE:** If the **ZERO** button is held longer than 2 seconds, the scale will power off.*
3. To cycle through the Auto Off settings (30-60-90-120-150-180), press and release the **UNITS** button multiple times.
4. After selecting the desired Auto Off setting, press and release the **ZERO** button to return to normal operation.

## Warranty

The Hornady G2 1500 Electronic Scale is a highly sensitive instrument that must be repaired and serviced by a factory qualified technician to maintain the warranty.

Hornady Manufacturing warrants for one year from the date of purchase, your G2 1500 Electronic Scale will be free from defects in material and workmanship. This warranty does not cover damage caused by normal wear, accidents, abuse, or failure to provide proper care and maintenance. Please contact Hornady Manufacturing at 1-800-338-3220 for service or warranty information. The warranty is void if the seal on bottom of unit has been tampered with.

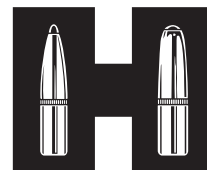

**Hornady**<sup>®</sup>  
*Accurate. Deadly. Dependable.*

P.O. Box 1848, Grand Island, Nebraska 68802-1848  
308-382-1390 • 800-338-3220 • Fax: 308-382-5761  
www.hornady.com • Hornady.com/contact\_us